27 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 654827

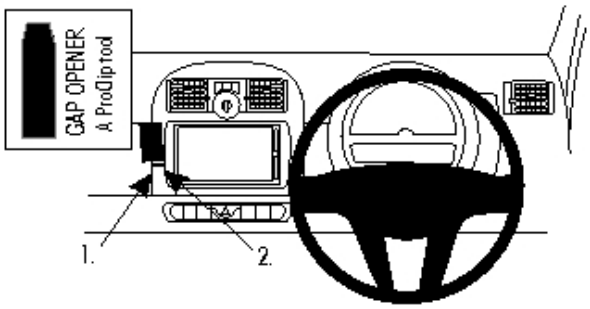

654827 ProClip

Angled mount, ONLY for models with factory navigation. Device holder must not be wider than 7cm, or it will block the navigation screen when opening.

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320286548274

Item no 654827 fits:
Smart ForTwo 11-14 (For all countries)

INSTALLATION INSTRUCTIONS

1.

2.

3.

4.

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the padded part of the dashboard and the frame surrounding the stereo, to widen the gap. Open the glove compartment door. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip.

2. Hook the angled edge on the left side of the ProClip around the sidewall edge.

3. Place your fingers on the left side of the ProClip and push firmly to the right, towards the stereo, so the angled edge on the right side goes into the gap above the gap opener. Press firmly forward with you thumb to make sure the angled edge goes all the way into the gap. Pull out the gap opener. Close the glove compartment door.

4. The ProClip is in place.